

This diagram illustrates the exploded view of the TV mounting bracket assembly. It shows the main bracket, the mounting plate, and the wall plate. The main bracket is shown in a perspective view, highlighting its L-shaped design and the mounting holes for the TV. The mounting plate is shown in a perspective view, highlighting its rectangular shape and the mounting holes for the wall. The wall plate is shown in a perspective view, highlighting its rectangular shape and the mounting holes for the wall. The diagram shows how these components are assembled together to mount the TV.

TA350

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



IMPORTANT WARNINGS AND CAUTIONS!



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.




WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.






WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on the TA350 bracket does not exceed 10 lbs (4.54 kg).


DIMENSIONS

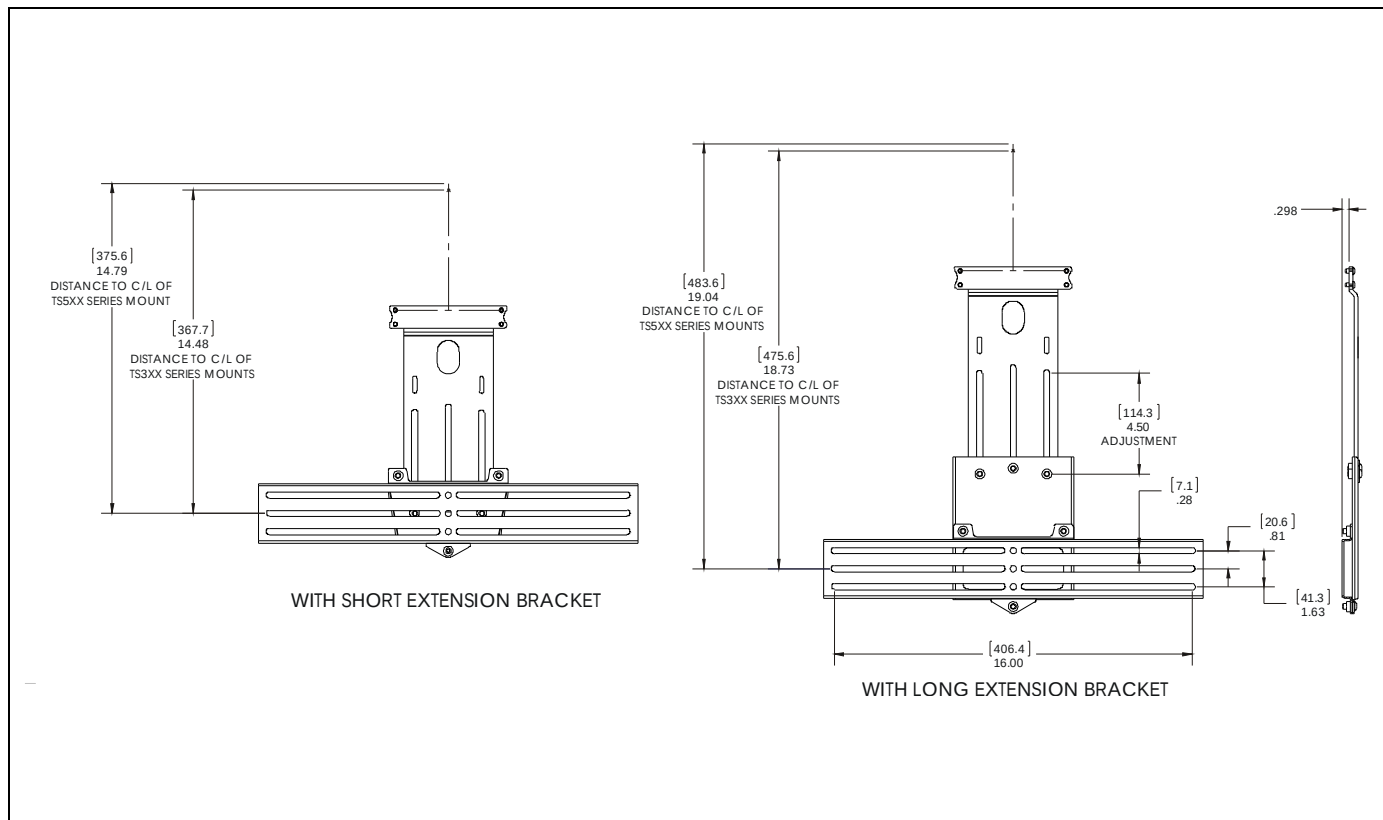


LEGEND

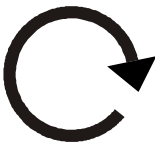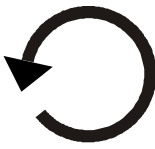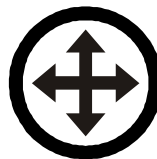	Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations		Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkteken Marquage au crayon
	Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations		Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou
	Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme		Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche		Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	By Hand A mano Von Hand Com a mão A mano Met de hand À la main		Optional Opcional Optional Opcional Opzionale Optie En option
	Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale		Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité

TOOLS REQUIRED FOR INSTALLATION

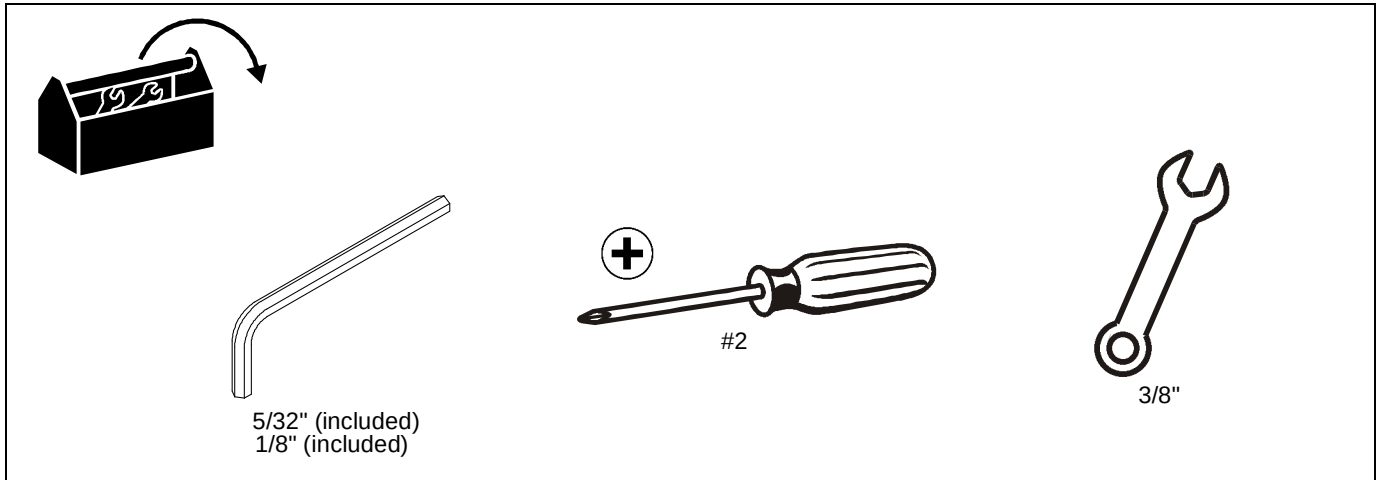

PARTS

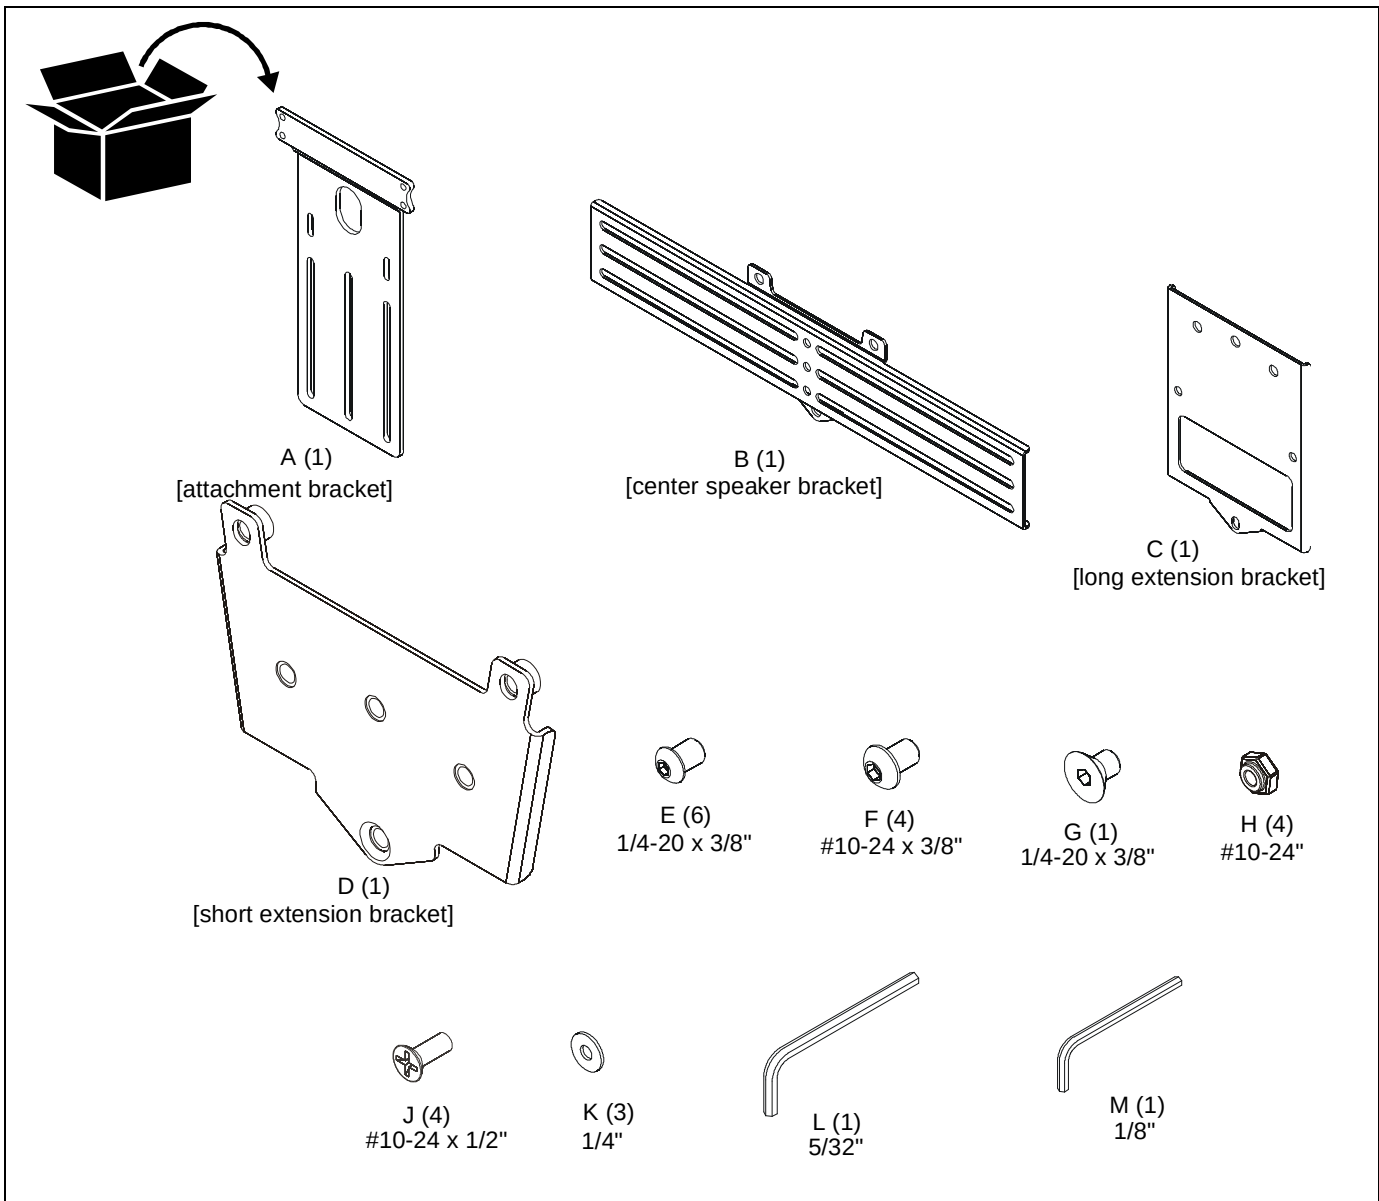

Installation

Bracket Assembly

With Short Extension Bracket

1. Use two 1/4-20 x 3/8" button head cap screws (E) and one 1/4-20 x 3/8" flat head cap screw (G) to attach short extension bracket (D) to center speaker bracket (B). (See Figure 1)

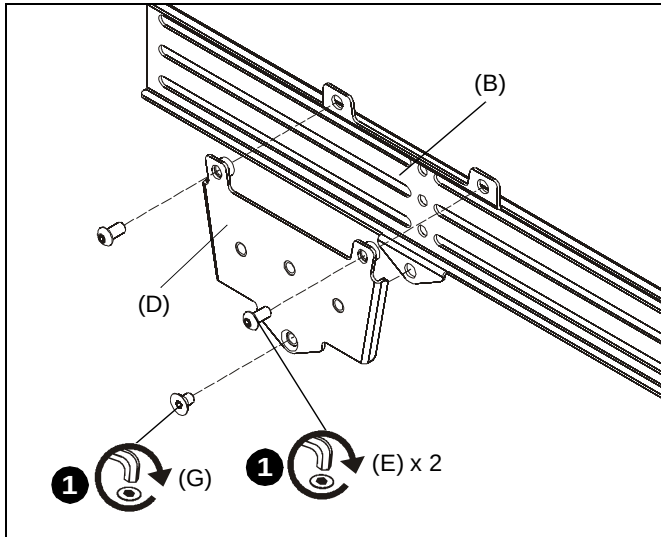


Figure 1

2. Use three 1/4-20 x 3/8" button head cap screws (E) and three 1/4" washers (K) to secure attachment bracket (A) to short extension bracket (D). (See Figure 2)

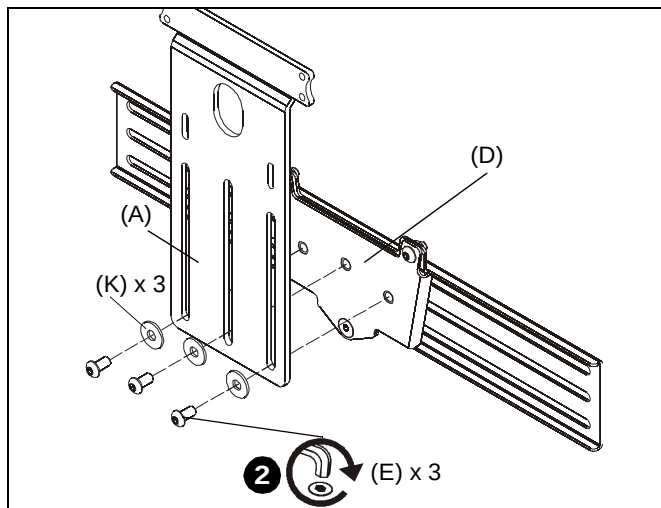


Figure 2

With Long Extension Bracket

1. Use three 1/4-20 x 3/8" button head cap screws (E) to attach long extension bracket (C) to center speaker bracket (B). (See Figure 3)

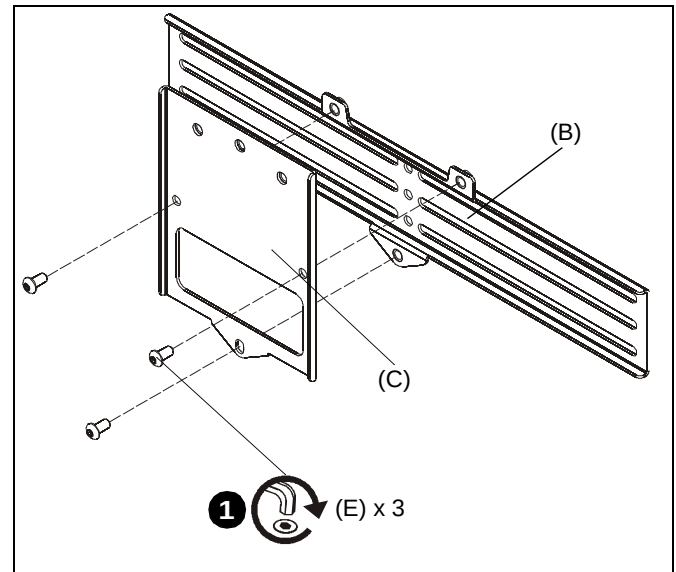


Figure 3

2. Use three 1/4-20 x 3/8" button head cap screws (E) and three 1/4" washers (K) to secure attachment bracket (A) to long extension bracket (C). (See Figure 4)

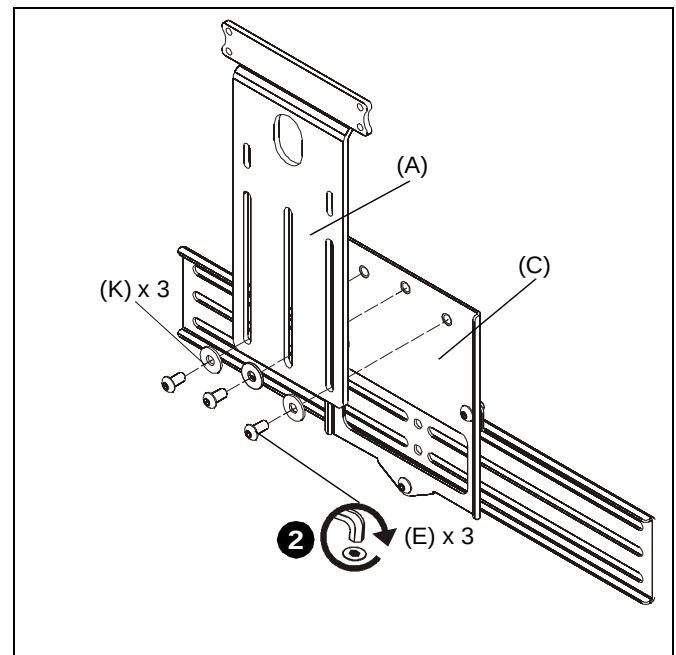


Figure 4

Install Attachment Bracket to Faceplate

NOTE: TA350 center channel speaker brackets may be installed above or below the display.

TS525 or iCF50 Installation

NOTE: Display does NOT have to be removed to attach bracket to TS525 or iCF50 faceplate.

1. Use four #10-24 x 3/8" button head cap screws (F) to connect attachment bracket (A) to upper or lower holes on swing arm faceplate. (See Figure 5) and (See Figure 6)

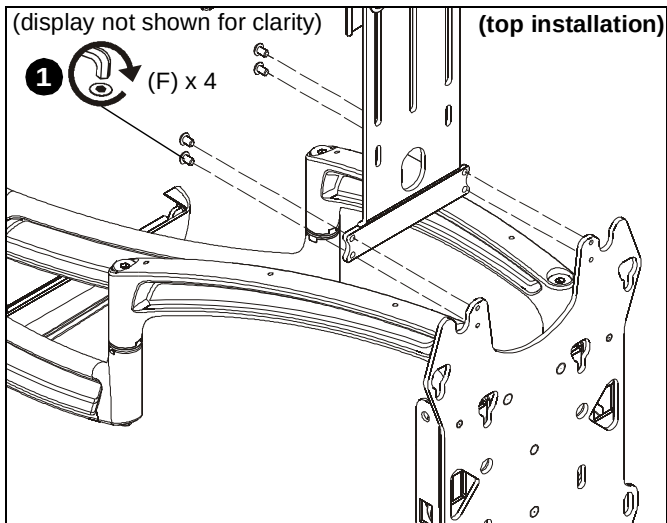


Figure 5

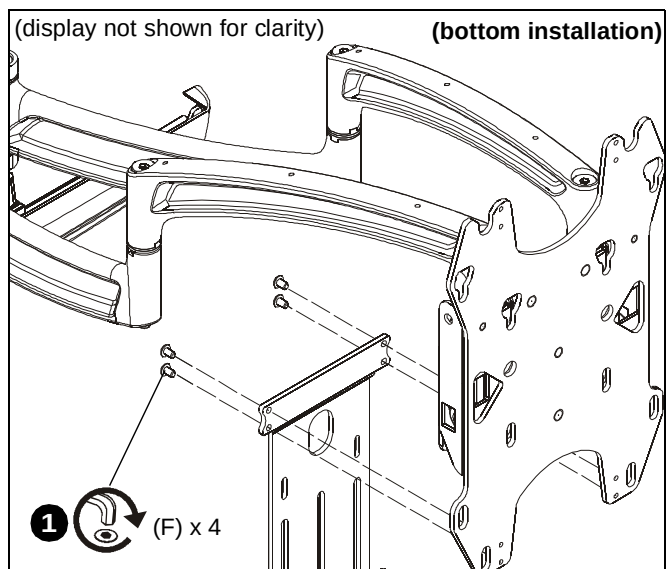


Figure 6

TS3XX or iCF30 Installation

1. If already installed, remove display from faceplate. See swing arm installation instructions for details.
2. Use four #10-24 x 1/2" Phillips flat head cap screws (J) and four #10-24 lock nuts (H) to connect attachment bracket (A) to faceplate. (See Figure 7) and (See Figure 8)

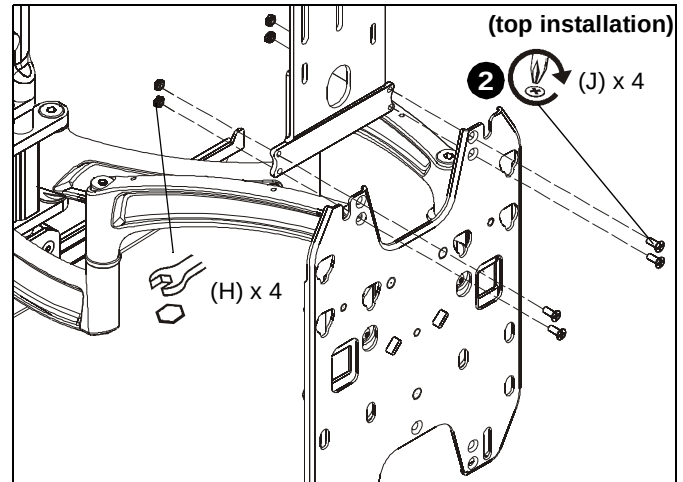


Figure 7

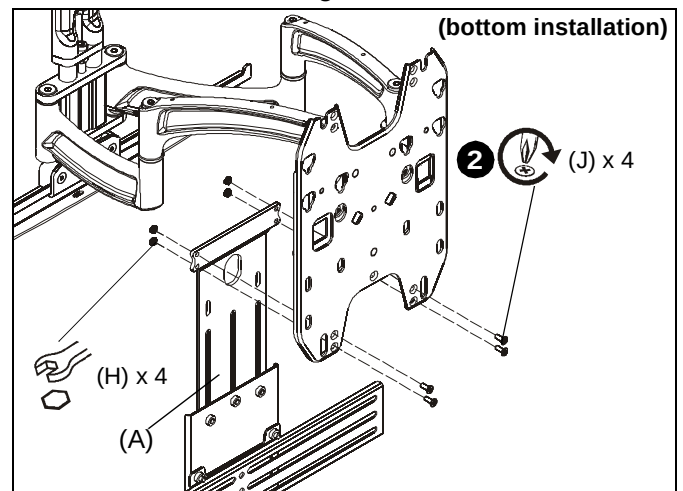


Figure 8

3. Reinstall display to faceplate. See swing arm installation instructions for details.

Attach to Side Speaker Bracket (if applicable)

If side speaker brackets (TA300) have been installed to mount side speakers, the attachment bracket should be attached to the horizontal rail of the side speaker brackets for additional support.

IMPORTANT ! : If installing below display, install both side speaker brackets prior to installing center speaker bracket to ensure an even mount.

1. Use two #10-24 x 1/2" button head cap screws and two #10 washers (provided with TA300) to connect horizontal bracket on side speaker brackets to attachment bracket (A). (See Figure 9)

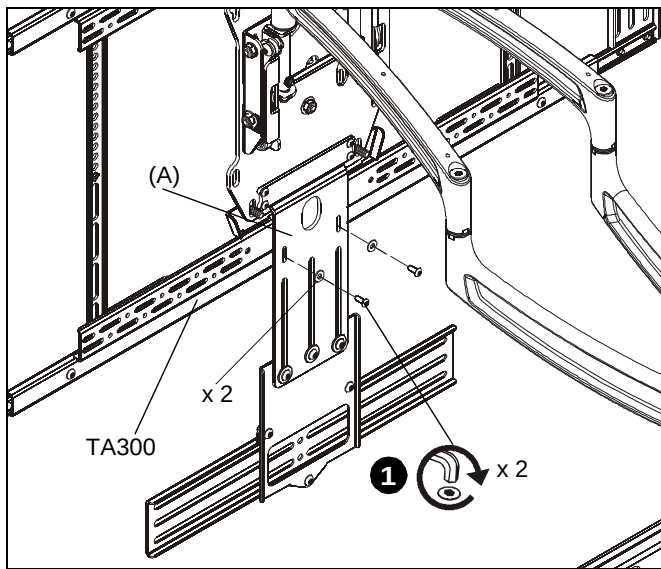


Figure 9

Center Speaker Installation



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on the TA350 bracket does not exceed 10 lbs (4.54 kg).

1. Attach center speaker to center speaker bracket (B) using appropriate hardware (not provided). (See Figure 10)

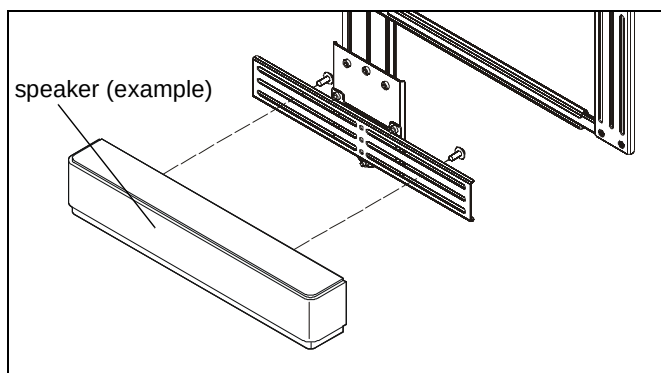


Figure 10

Adjustments

Height Adjustment

1. Loosen three 1/4-20 x 3/8" button head cap screws (E) holding extension bracket (C or D) to attachment bracket (A). (See Figure 11)
2. Adjust height of center speaker bracket (B) as desired. (See Figure 11)
3. Tighten three 1/4-20 x 3/8" button head cap screws (E) holding extension bracket (C or D) to attachment bracket (A). (See Figure 11) or (See Figure 12)

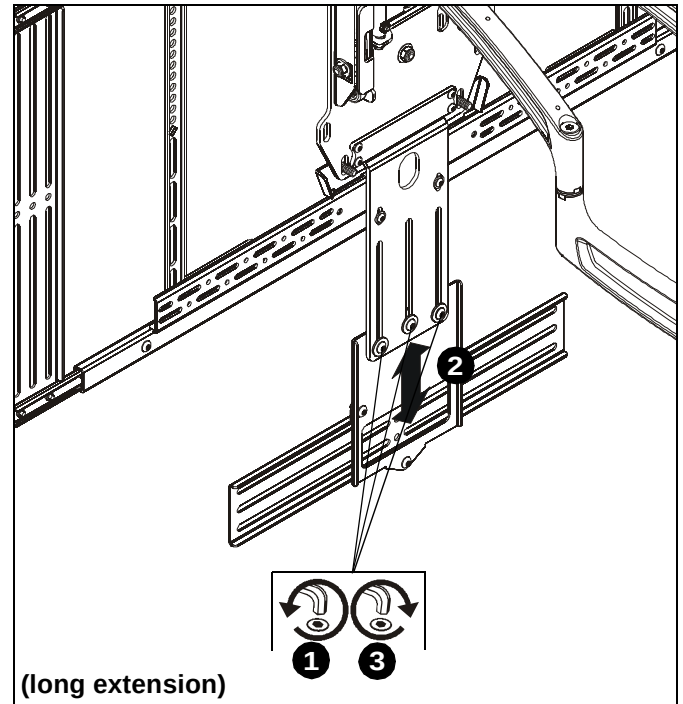


Figure 11

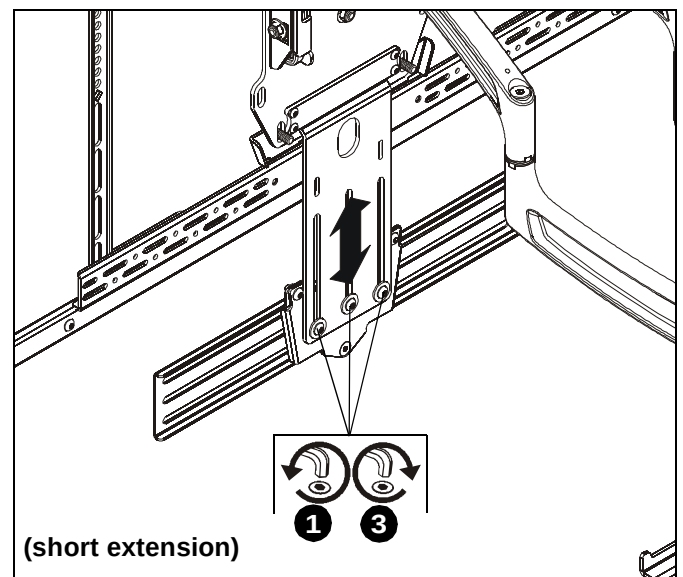


Figure 12



Our Mounts. **Your Vision.**

Chief Manufacturing, a products division
of Milestone AV Technologies

8805-002019 Rev01

©2011 Milestone AV Technologies, a

Duchossois Group Company

www.chiefmfg.com

08/11

USA/International	A 8401 Eagle Creek Parkway, Savage, MN 55378 P 800.582.6480 / 952.894.6280 F 877.894.6918 / 952.894.6918
Europe	A Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands P +31 (0)40 2668620 F +31 (0)40 2668615
Asia Pacific	A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong P 852 2145 4099 F 852 2145 4477

